


Notes

- 1 For 1DT, prepare the door for two #8 x 1" screws.
- 2 For 2DT, drill two 9/32" diameter through holes.
- 3 Since the 1DT function is surface-mounted, door thickness does not apply. The 2DT function is for 1 3/4" doors.

Important

Check the lock for the proper backset before drilling.

Fold along the appropriate dotted line and place on the high edge of the door bevel.

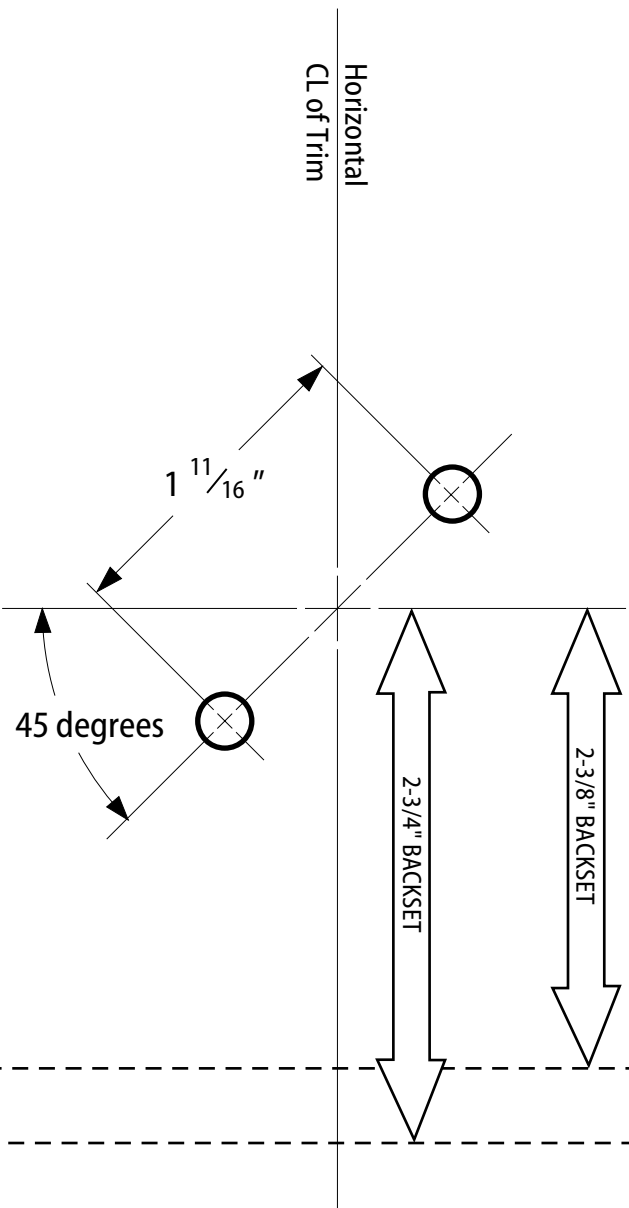

Title
Installation Template for 8K and 9K Dummy Trim

Series
8K, 9K

Backset

Strike

Door thickness
See note 3

Rev date
06/1999

Template
number

K18

Rev

B

BEST ACCESS SYSTEMS

Note: To ensure accurate door preparation, use only factory-printed or laser-printed templates. Do not use copies or facsimiles.

T56059/Rev B 1797308 ER-7991-1