


# Template for 2 3/4" Backset 6K, 7KC, 8K and 9K Cylindrical Locks with RQE

**Caution:** For 7KC and 9K locks ONLY, drill a 5/16" dia. hole above and below the 2 1/8" hole. To ensure proper alignment of the through-bolts and levers, use a KD303 drill jig. The "C" style rose on the 6K and 8K locks will NOT cover these holes.

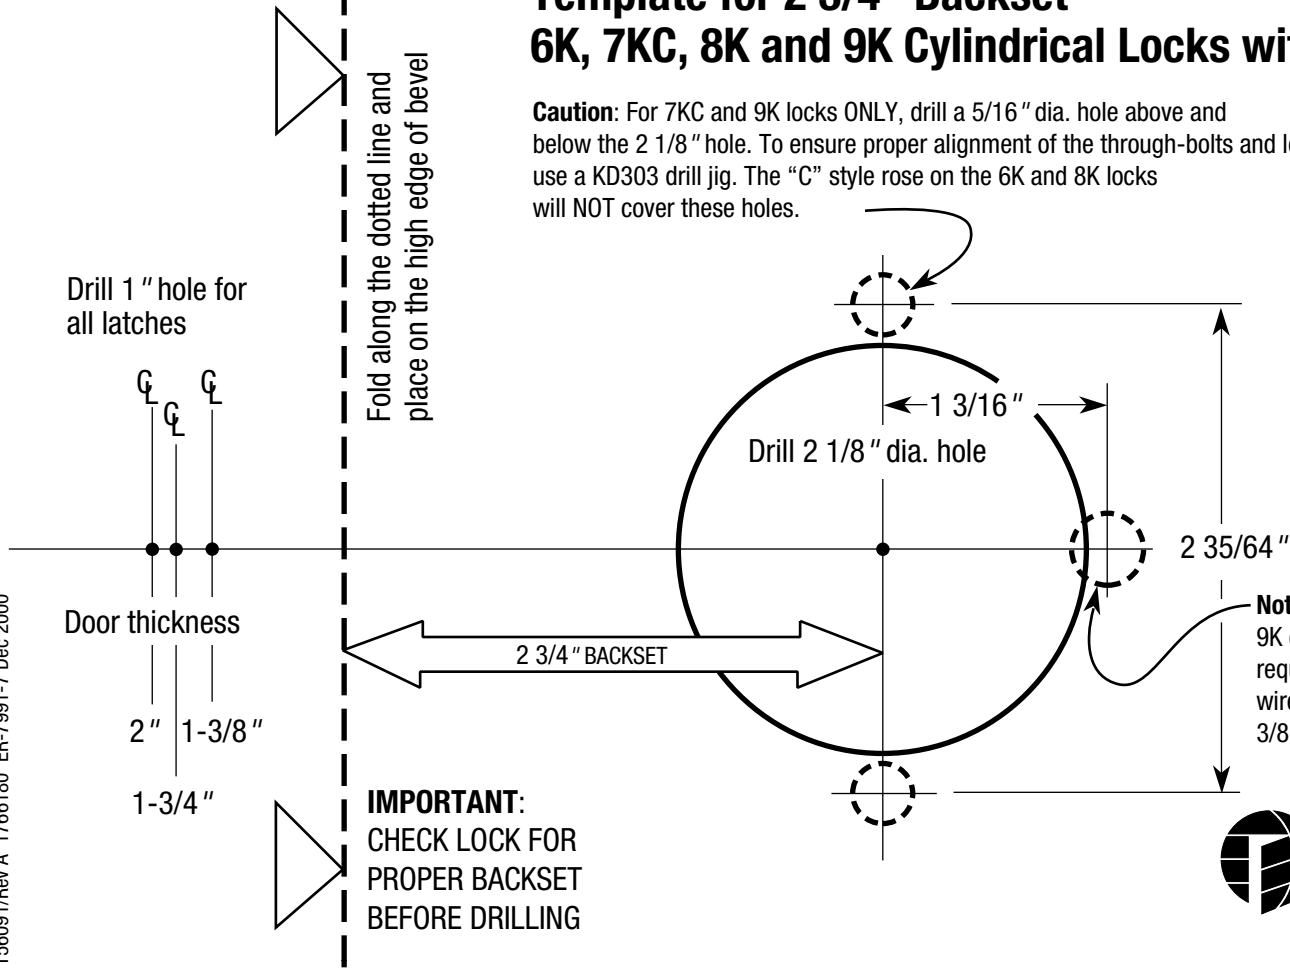

Drill 1" hole for all latches

Fold along the dotted line and place on the high edge of bevel

Door thickness

2" 1-3/8" 1-3/4"

2 3/4" BACKSET

Drill 2 1/8" dia. hole

1 3/16"

2 35/64"

**Note:** For 8K & 9K electrified locks or request-to-exit (RQE) wires ONLY, drill a 3/8" dia. hole as shown.

**IMPORTANT:**  
CHECK LOCK FOR  
PROPER BACKSET  
BEFORE DRILLING

