

### Mark and drill holes

- 1 Determine the inside and outside of the door, then mark and drill each side of the door according to the proper function. See H06 Installation Specifications.
- 2 For best results, cut the template along the dotted lines and align the arrows with the marked centerlines.
- 3 Use the other side of this template for marking the other side of the door.
- 4 Mark the horizontal centerline of the strike level with the horizontal centerline of the lock. See the Installation Instructions.


### Note

- 1 This template is for wood doors only.

Title Installation Template for 38H-39H Mortise Locks				<b>BEST ACCESS SYSTEMS</b>		
Series 38H-39H	Backset 2 3/4"	Trim style M	Door thickness 1 3/4"-5"	Rev date 04/2000	Template number <b>H08</b>	Rev <b>F</b>

**Note:** To ensure accurate door preparation, use only factory-printed or laser-printed templates. Do not use copies or facsimilies.

T61953/Rev F 1794658 ER-7991-19 Apr 2000

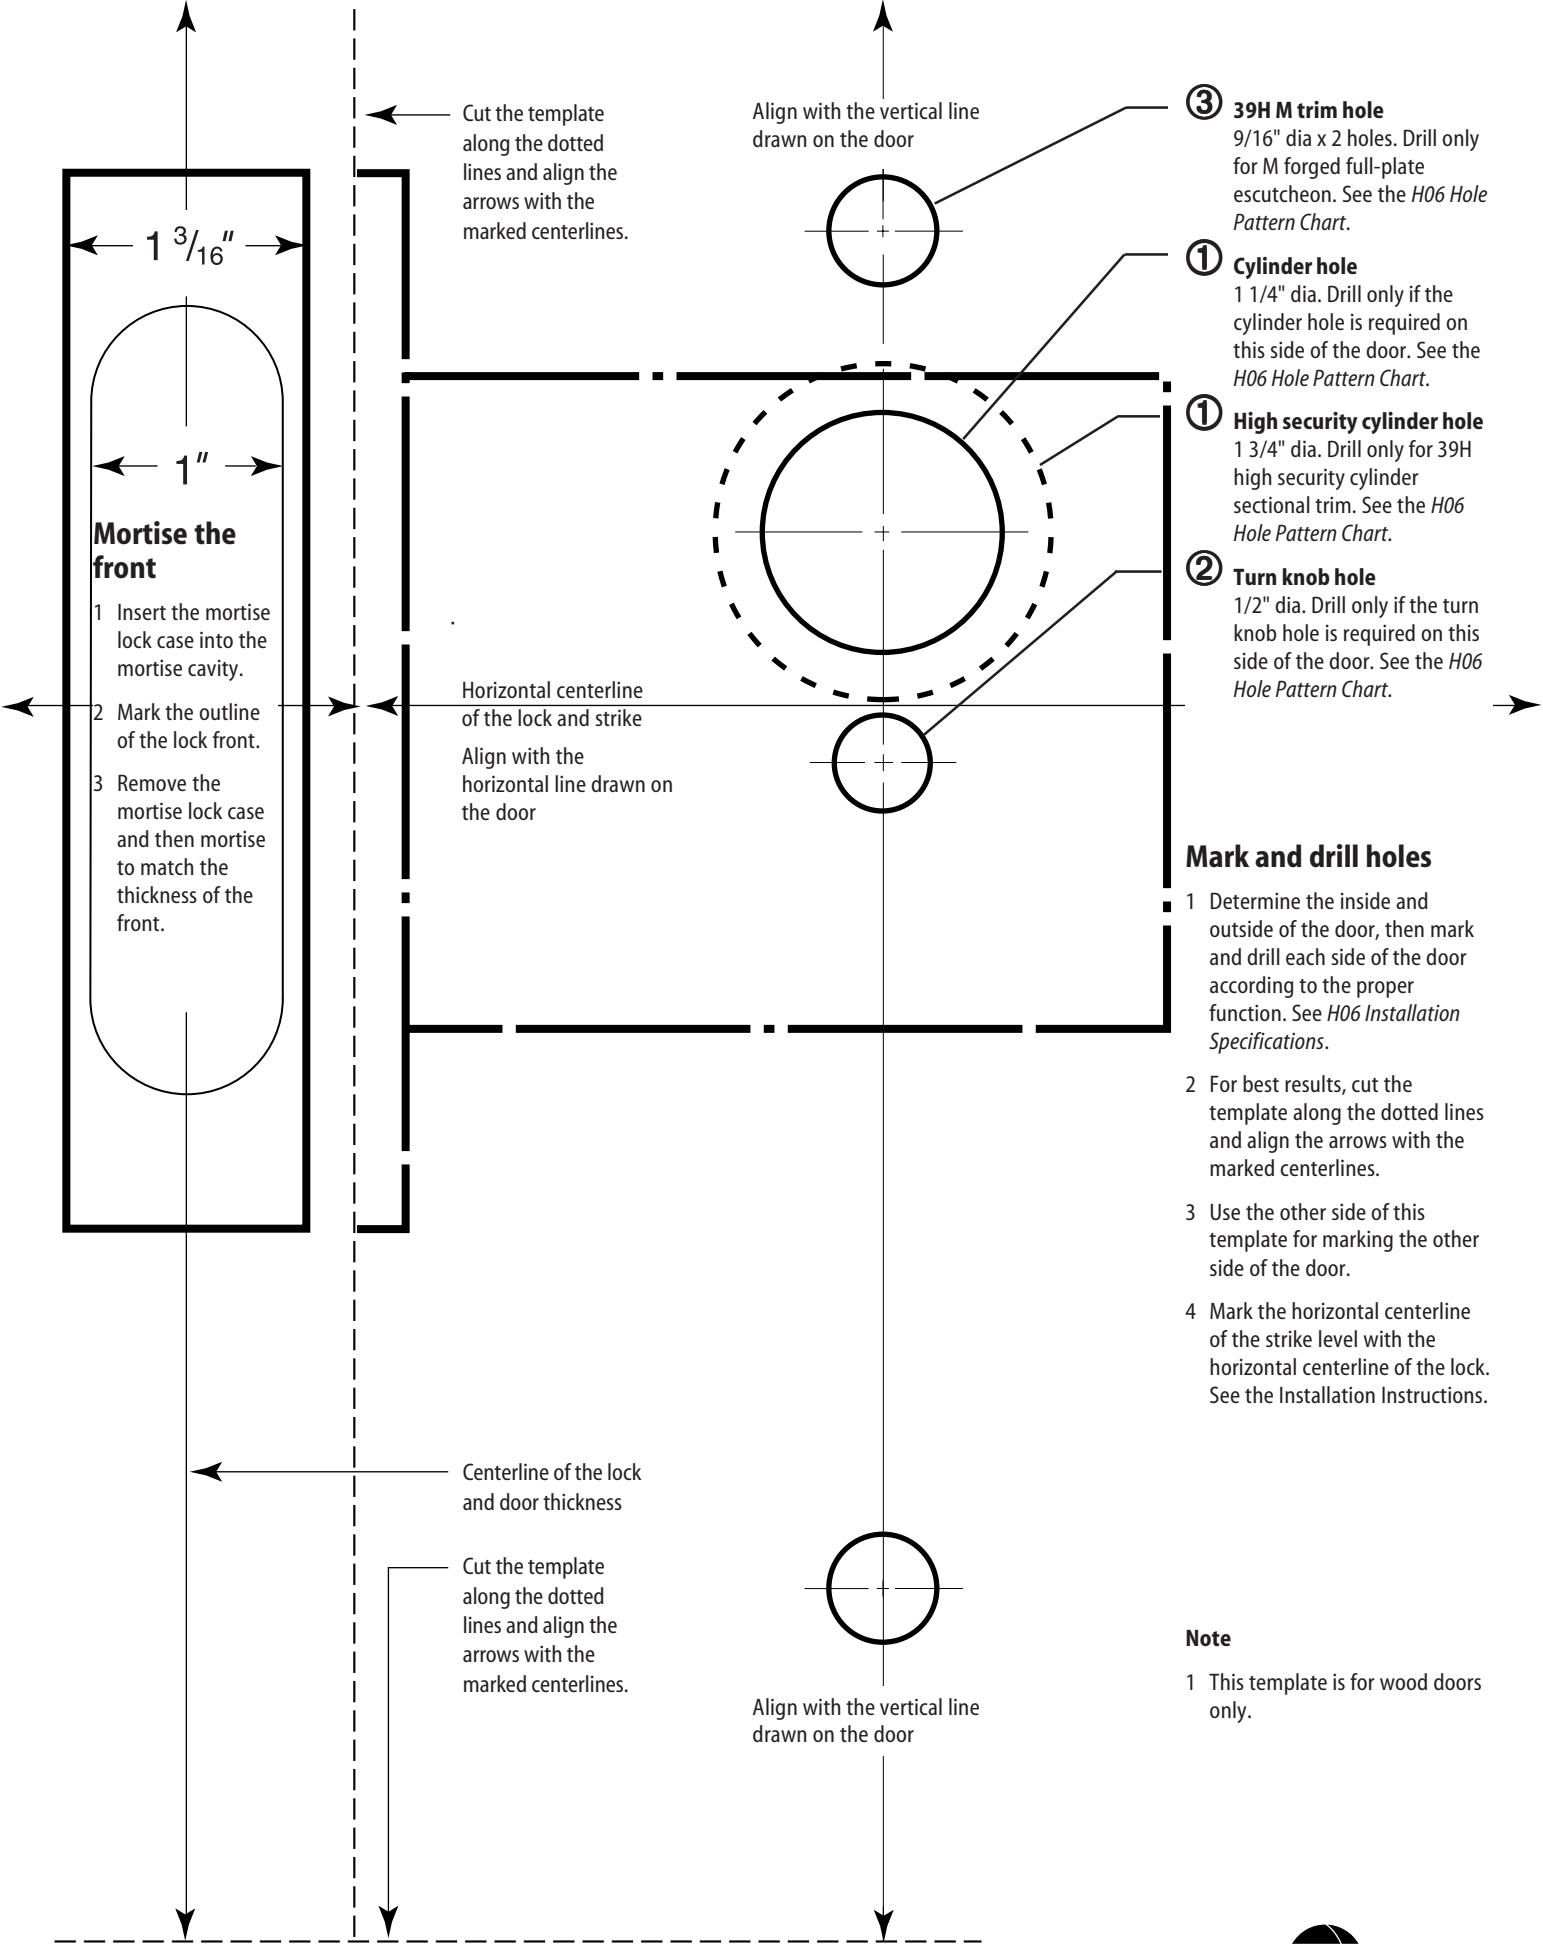

Cut the template along the dotted lines and align the arrows with the marked centerlines.

Align with the vertical line drawn on the door

**③ 39H M trim hole**  
9/16" dia x 2 holes. Drill only for M forged full-plate escutcheon. See the *H06 Hole Pattern Chart*.

**① Cylinder hole**  
1 1/4" dia. Drill only if the cylinder hole is required on this side of the door. See the *H06 Hole Pattern Chart*.

**① High security cylinder hole**  
1 3/4" dia. Drill only for 39H high security cylinder sectional trim. See the *H06 Hole Pattern Chart*.

**② Turn knob hole**  
1/2" dia. Drill only if the turn knob hole is required on this side of the door. See the *H06 Hole Pattern Chart*.

Horizontal centerline of the lock and strike  
Align with the horizontal line drawn on the door

**Mark and drill holes**

- 1 Determine the inside and outside of the door, then mark and drill each side of the door according to the proper function. See *H06 Installation Specifications*.
- 2 For best results, cut the template along the dotted lines and align the arrows with the marked centerlines.
- 3 Use the other side of this template for marking the other side of the door.
- 4 Mark the horizontal centerline of the strike level with the horizontal centerline of the lock. See the *Installation Instructions*.

**Note**

- 1 This template is for wood doors only.

Centerline of the lock and door thickness

Cut the template along the dotted lines and align the arrows with the marked centerlines.

Align with the vertical line drawn on the door

