

**STANLEY**  
**OMNILOCK®**

# Installation Addendum for Stanley Omnilock 45HOM Extreme Weatherized Locks

## 45HOM Extreme Weatherized Mortise Locks

This addendum begins at step 11 of *Installation Instructions for Stanley Omnilock 45HOM Mortise Locks T83312*.

- 1 Insert the escutcheon standoffs into the predrilled holes.
  - 2 Thread connecting cables, motor wire and grounding wire through the door cable hole. Use screws and washers to attach the escutcheon from the inside of the door. See Figure 1.
- Note:** Ensure that no wires are pinched when attaching the escutcheon to the door.
- 3 Thread the connecting cables motor wire and grounding wire through the module bracket wire inlet.
  - 4 Attach the module bracket to the door with the proper mounting screws.
  - 5 Connect the wires and batteries as shown in Figure 2.
  - 6 Secure the module cover with the security screws provided. See Figure 3.
  - 7 Continue with step 14 of the *Installation Instructions for Stanley Omnilock 45HOM Mortise Locks T83312* to complete the installation.

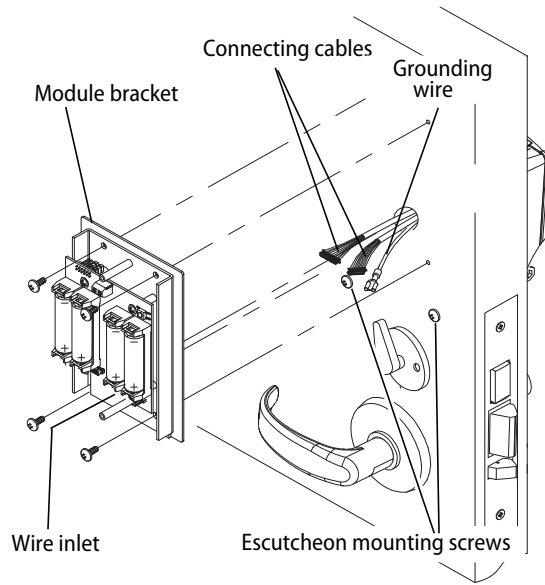


Figure 1 Inside circuit module

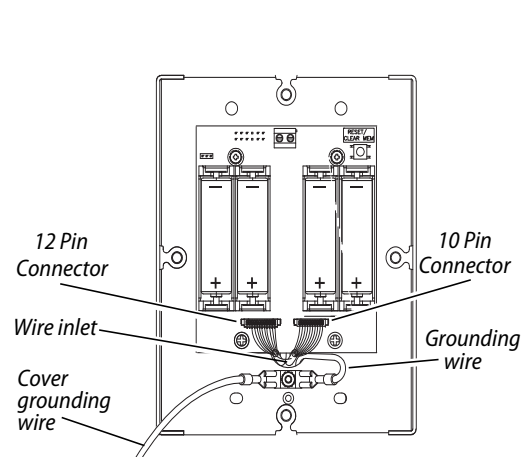


Figure 2 Wire connections to circuit module



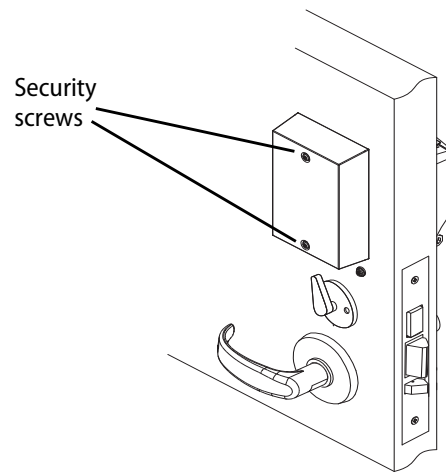


Figure 3 Inside view of weatherized model

← verify exactly 1" →  
**Measure  
 scale after  
 printing**  
 ← verify exactly 1" →

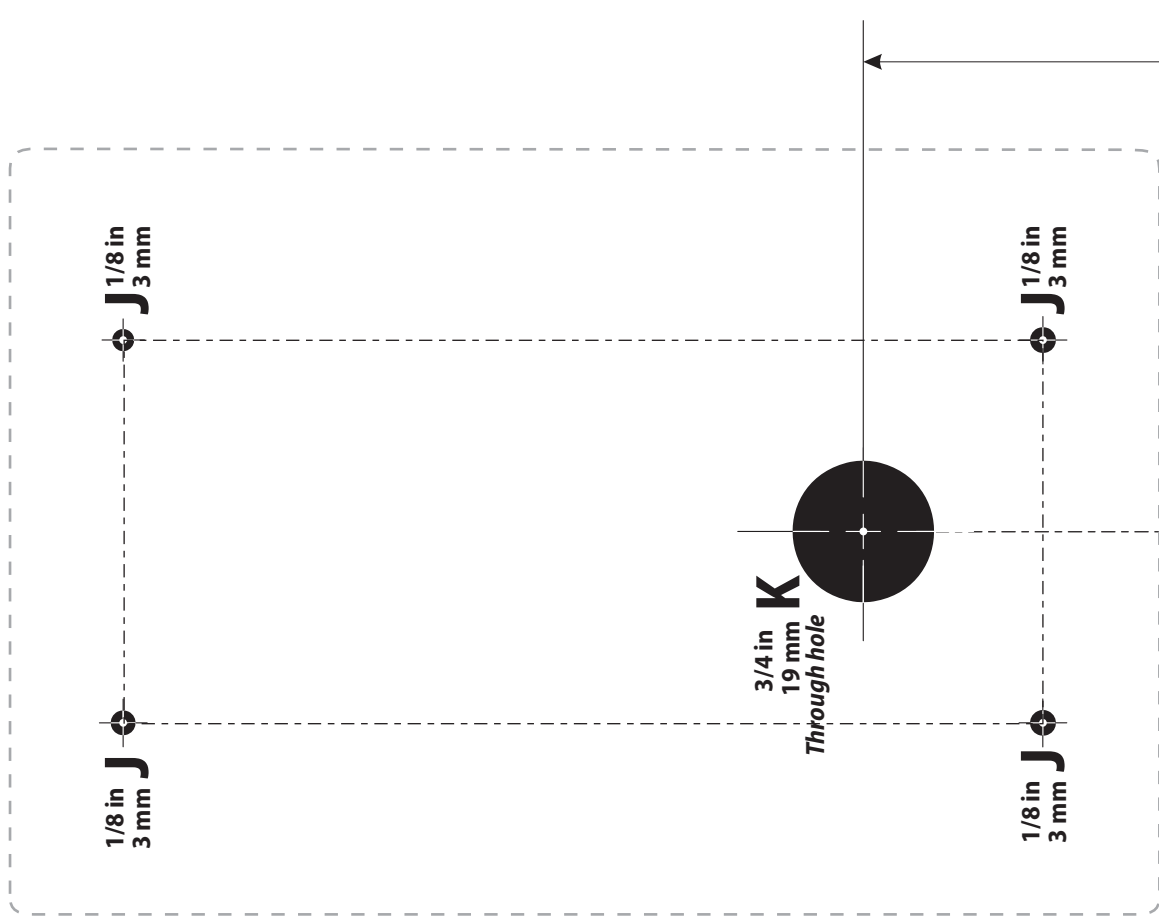


## Align to vertical centerline




### Hole Descriptions

- B** Thumb turn (1) *TV model only*
- C** Lever (1)
- D** Trim mounting (2)
- F** Module bolt (2)
- H** Thumb turn mounting screws (2)  
*TV model only*
- J** Weatherized module bolts (4)
- K** Cables

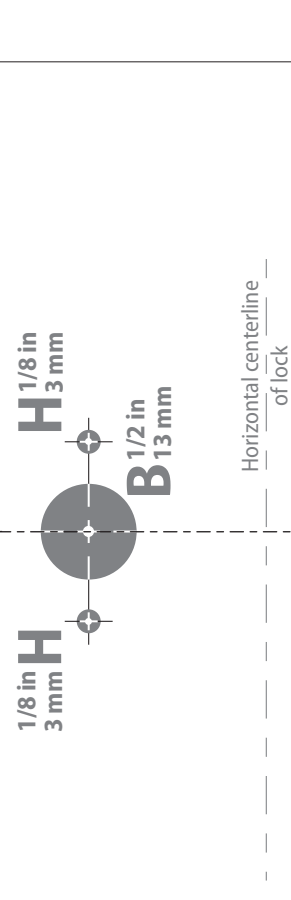

## Inside Door

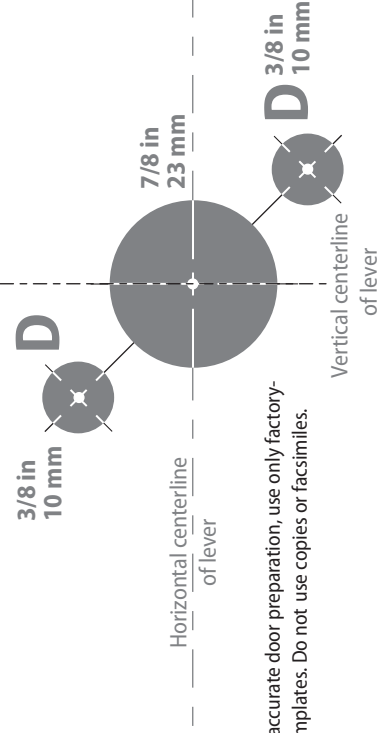

To ensure accurate door preparation, use only factory-printed templates. Do not use copies or facsimiles.