Template for 3 3/4″ & 5″ Backset
6K, 7KC, 8K and 9K Cylindrical Locks with RQE

CAUTION: For 7KC and 9K only, drill 5/16" dia. holes above and below 2 1/8" hole. To ensure proper alignment of through-bolts and chassis, use a KD303 drill jig. The "C" style roses on the 6K and 8K locks will NOT cover these holes.

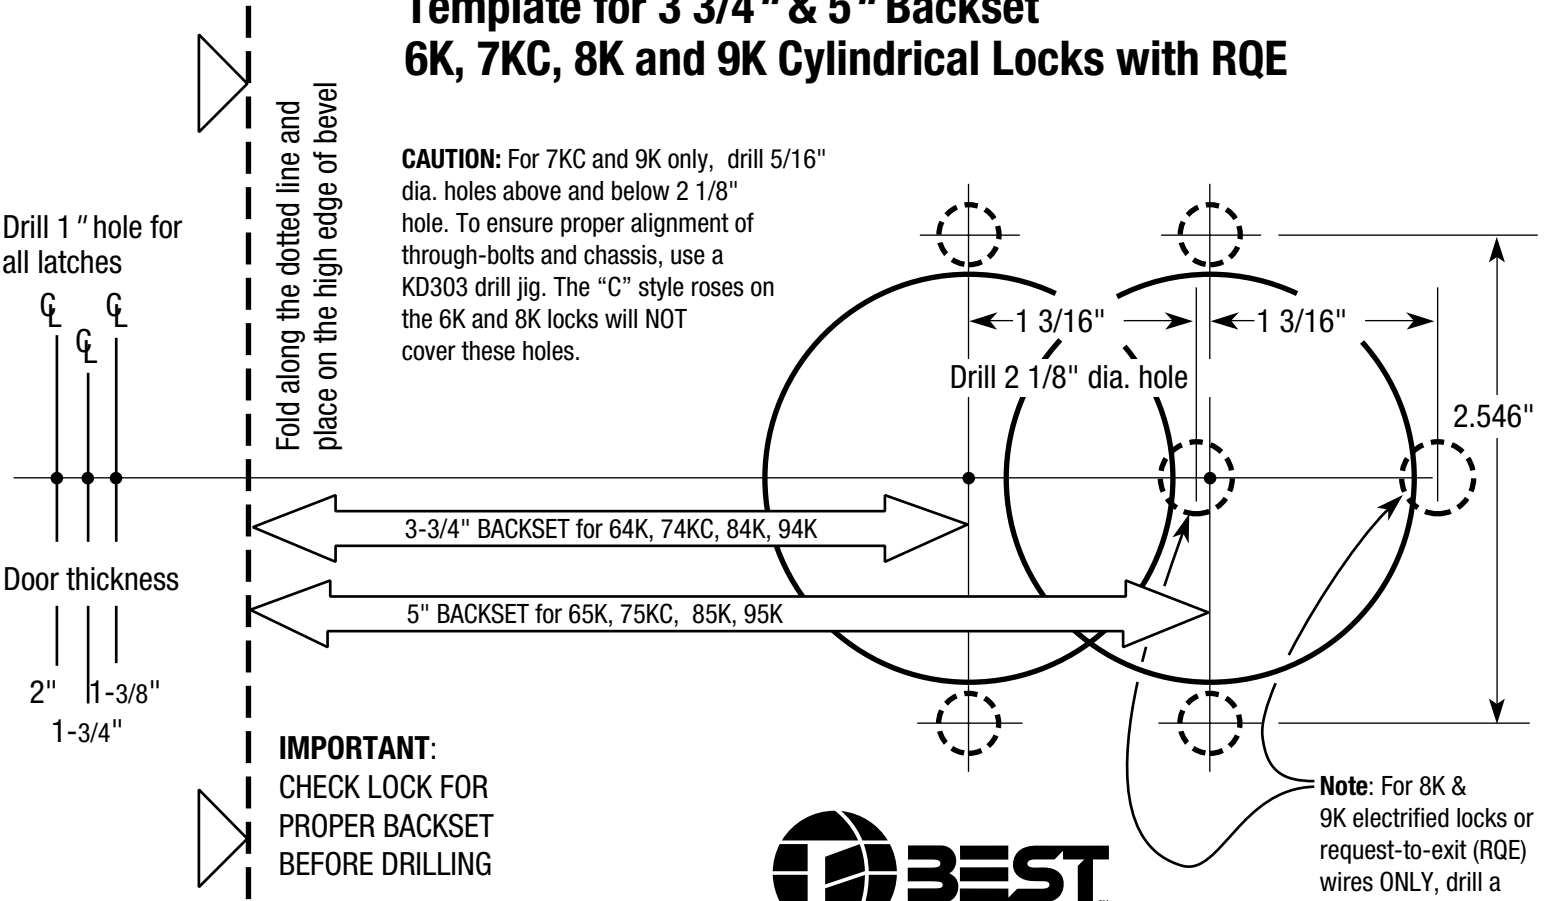

IMPORTANT:
CHECK LOCK FOR PROPER BACKSET BEFORE DRILLING

Note: For 8K & 9K electrified locks or request-to-exit (RQE) wires ONLY, drill a 3/8" dia. hole as shown.

BEST ACCESS SYSTEMS™

T56077/Rev A 1818872 ER7991-7 Dec 2000