Notes

1 Also see the *Q05 Template—Installation Template for 93KQ Cylindrical Locks*.

2 Allow plus tolerance for clearance per ANSI A115.5. The general tolerance is ± 1/64″.

3 The lock and latch case support are required from the door manufacturer.

4 The plaster guard is required from the frame manufacturer.

5 Prepare for a #8–32 screw.

6 Prepare for a #12–24 screw.

7 When a strike box is used, 9/64″.

8 For backsets other than 2 3/4″, position the vertical centerline of the lock appropriately.

9 Drill the 1″ hole 1 3/4″ deep.

10 Drill the 1″ hole 1″ deep.

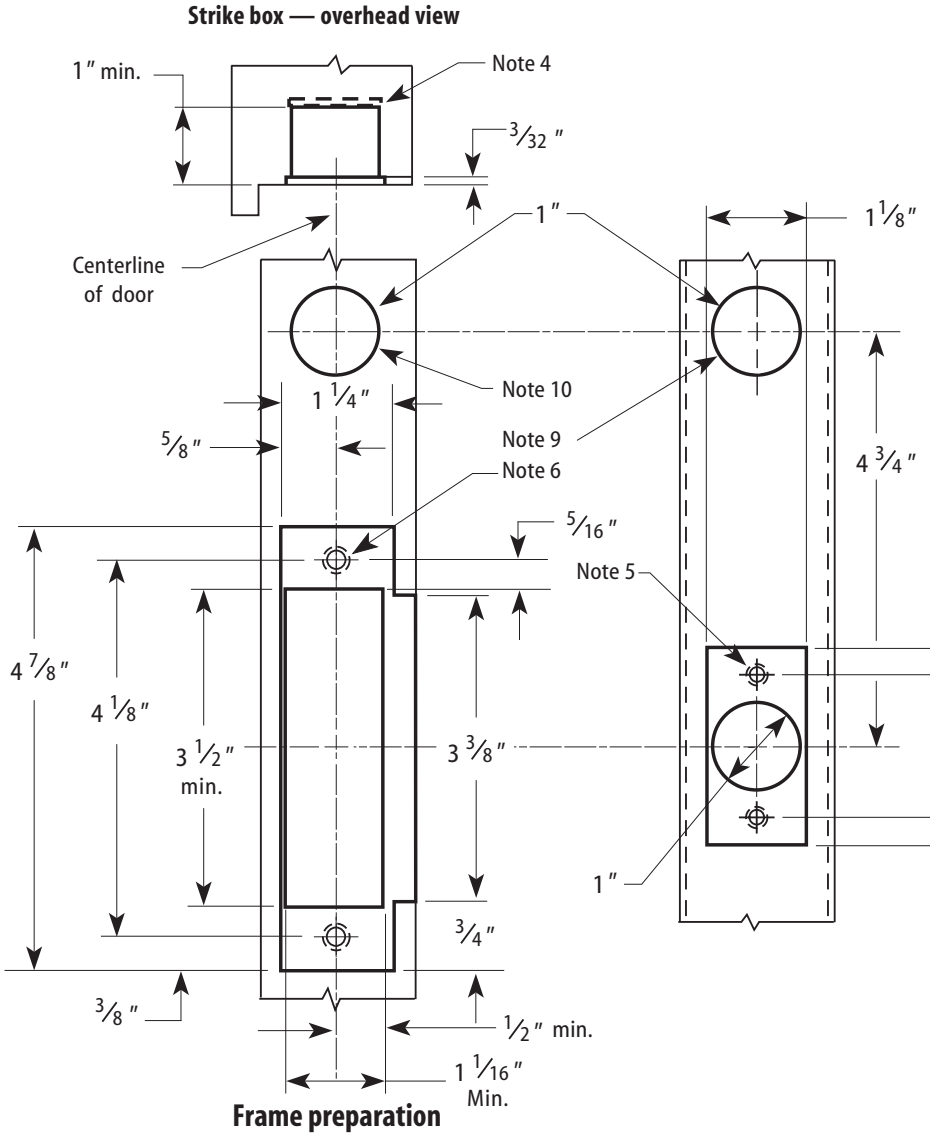

Frame preparation

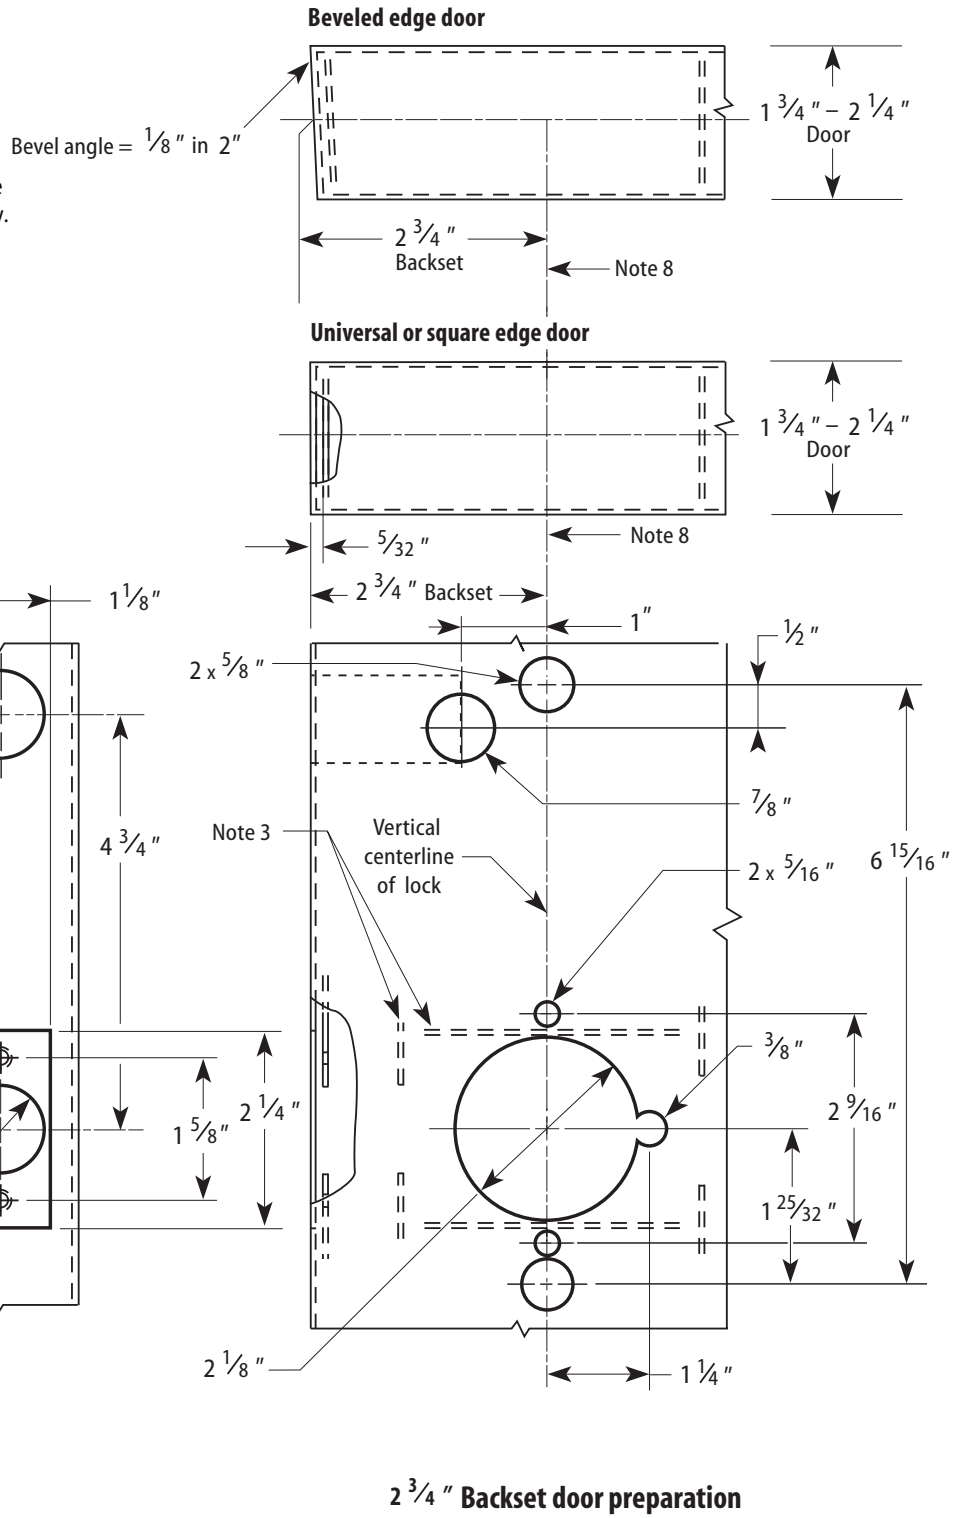

2 3/4″ Backset door preparation

BEST ACCESS SYSTEMS					Rev A
Title: Installation Specifications for 93KQ Cylindrical Locks with Large Strike				Template number Q02	
			Door thickness 1 3/4"–2 1/4"	Rev date 7/2008	
		Trim style DV, MS, PH, PM			
Series 93KQ	Backset 2 3/4", 3 3/4", 5"				

T82602/Rev A ER-7991-1 July 2008